


Sunoptics External Guard Installation


PARTS:

- #10-16 x $\frac{3}{4}$ " Self-Drillers (2 per bracket)
- Aluminum Brackets
- Guard (4" x 4" 3Ga Pre-Galv. Wire Mesh)
- Cable Clamps (7 per unit, included on two-piece guards only)

1. Ensure the skylight is properly secured to curb.
2. Place the external guard onto the skylight and determine best attachment point for bracket on the skylight frame.
3. **If guard came in two pieces**, starting from the top center, secure the two guard pieces together using the included cable clamps. If guard came in one piece, proceed to the next step.

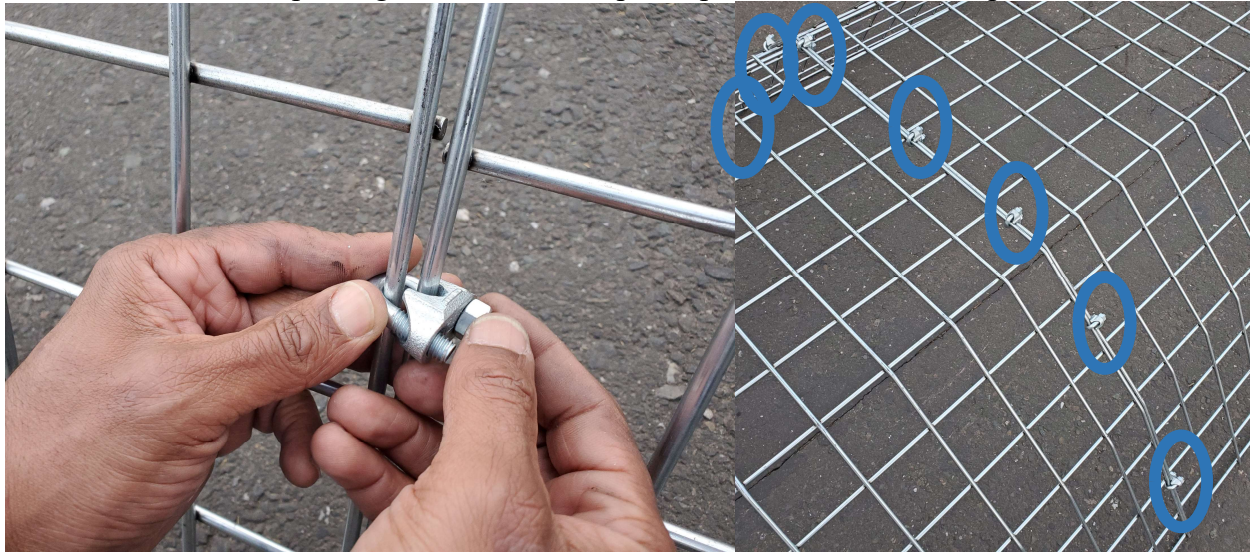

4. With the External Guard centered over the skylight place the first clip onto the guard, no greater than 12 inches from the end of the guard. While pressing down on the clip secure with two #10 screws. Clips should be installed 12" on center and the amount will vary based on the length of the skylight.

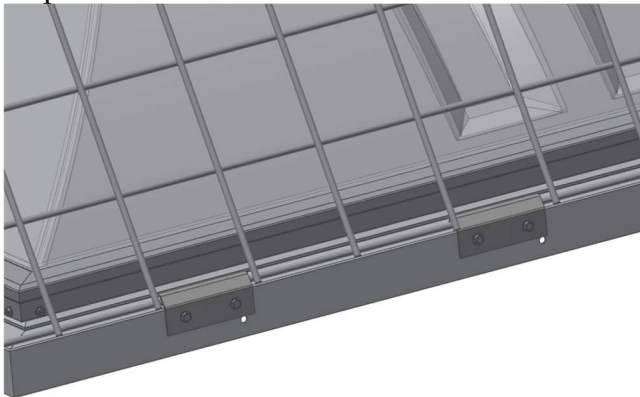


Sunoptics External Guard Installation

5. Repeat installing the clips every 12" until side is complete and clip location is even and centered.



6. Repeat steps 3 and 4 on opposite side.
7. Verify External Guard is securing fastened

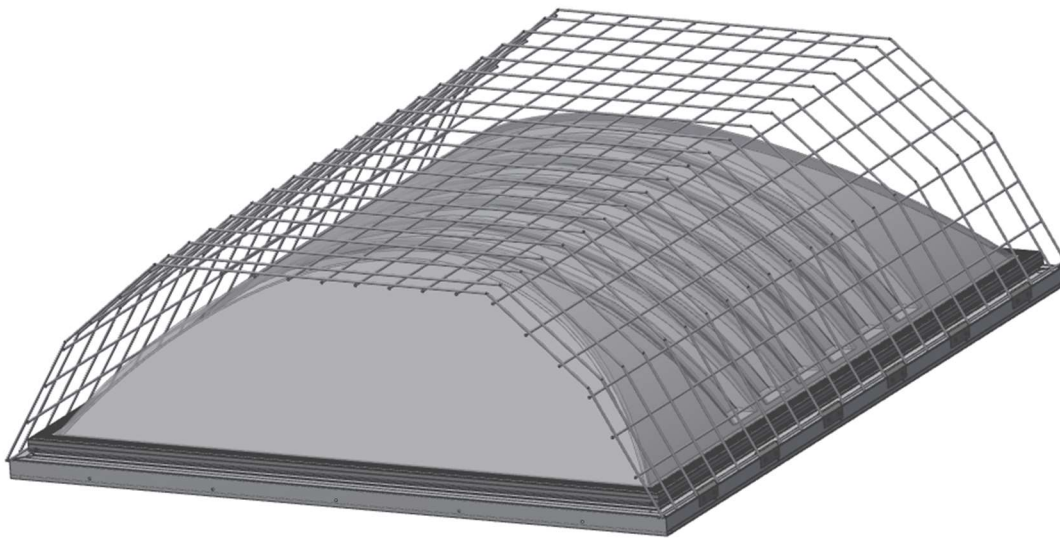

Sunoptics recommends professional installation of the skylights by a competent licensed contractor. **Sunoptics** is not an insurer of, or for any Contractor/Installer of its products and has no control over the installation process. Therefore, **Sunoptics** is to be held completely harmless from any litigation arising from installation mishap, regardless of cause, or severity.

Sunoptics recommends using only reputable contractors that are experienced licensed and bonded. This is a guide for typical installation, your specific installation techniques may vary. You are responsible for complying with local building codes. Please consult an engineer regarding structural modifications and support for the system.